


1

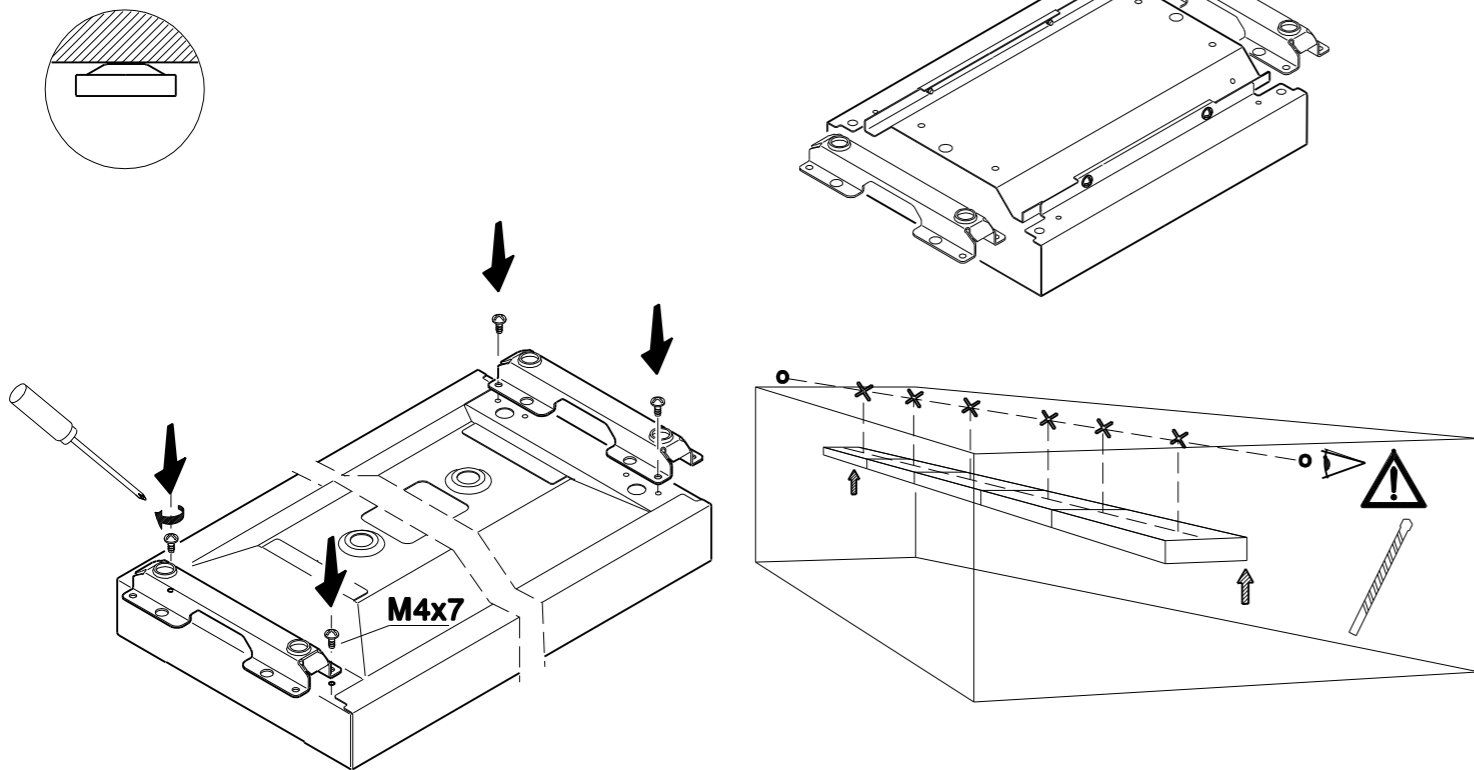



sequenza di installazione :
suite d'installation :
secuencia de instalaci3n :
installation's sequence :
Folge der Installation :

A , **B** , **C**


cod.	A0880 A0892	A0882 A0894	A0883 A0895	A0884 A0896	A0885 A0897
L mm	190	210	510	810	1110

3F Travetta 690 = 475 mm
3F Travetta 1290 = 1075 mm
3F Travetta 1590 = 1375 mm

A0880 A0882 A0883 A0884 A0885
A0892 A0894 A0895 A0896 A0897

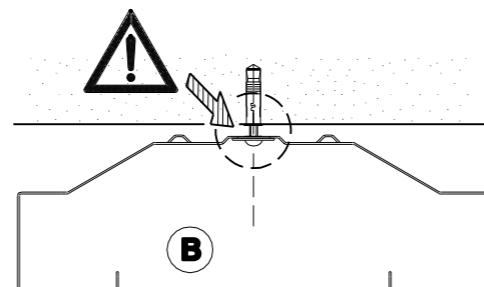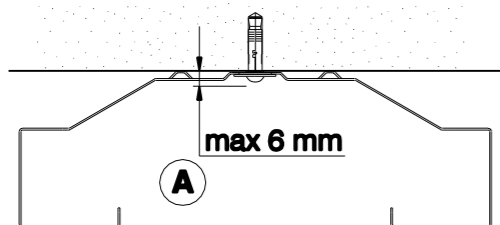


1/A

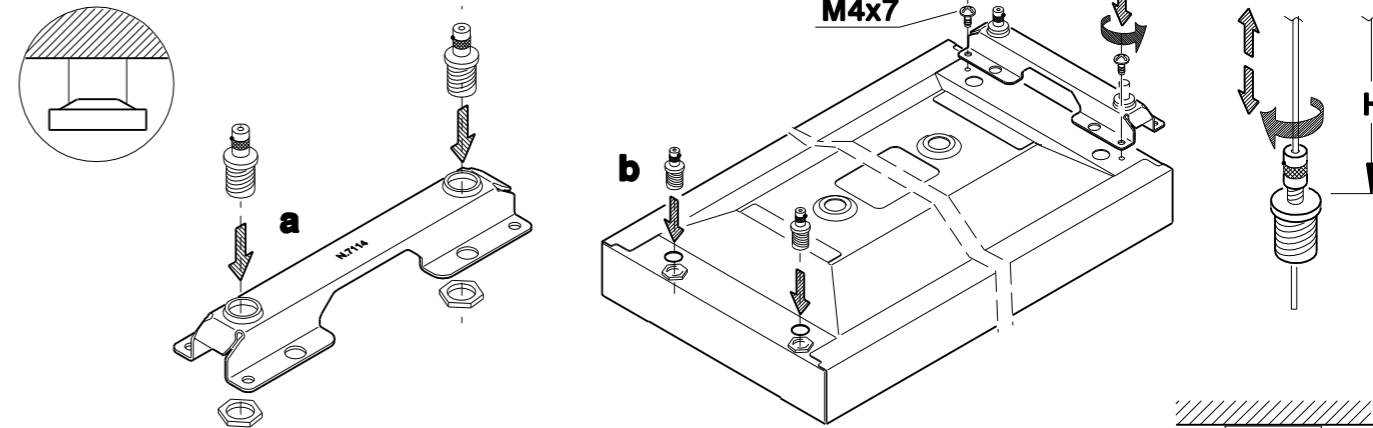


sequenza di installazione :
suite d'installation :
secuencia de instalaci3n :
installation's sequence :
Folge der Installation :

A , **B**


cod.	A0880 A0892	A0882 A0894	A0883 A0895	A0884 A0896	A0885 A0897
L mm	190	210	510	810	1110



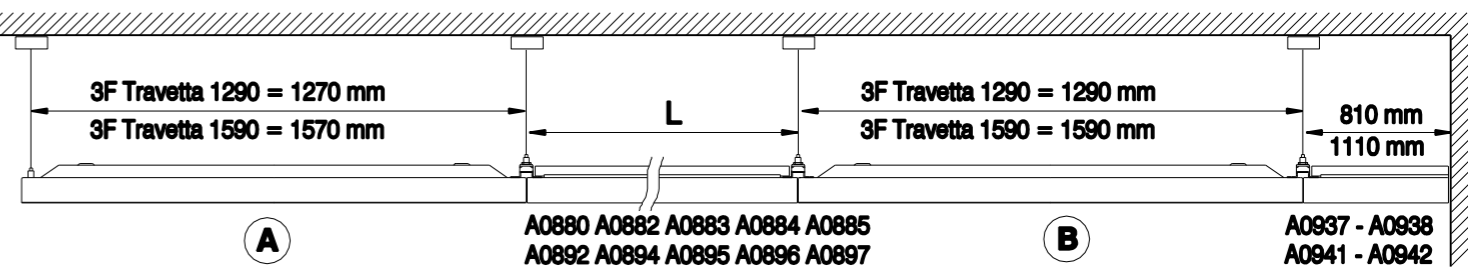




1/B

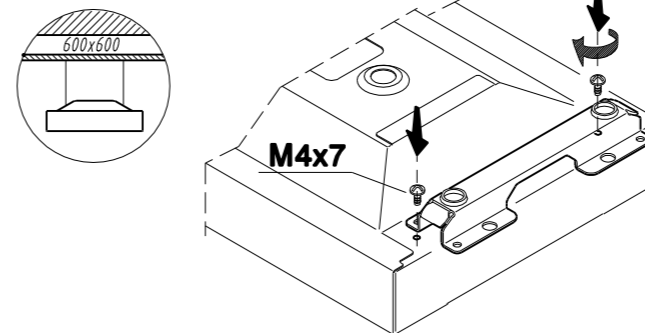

cod.	L mm	applicaz.	passo mm
A0882 A0894	210	1590	600
A0883 A0895	510	1290	600
A0884 A0896	810	1590	1200
A0885 A0897	1110	1290	1200

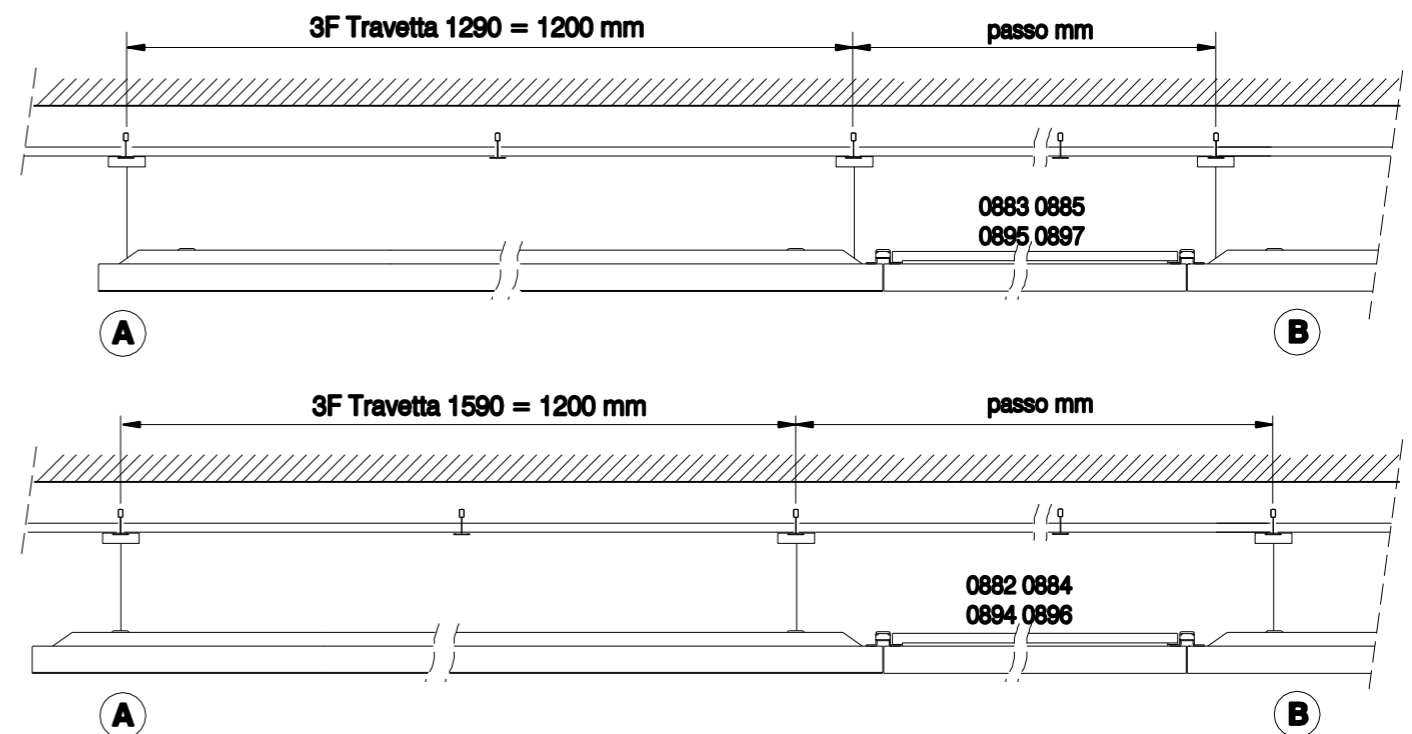

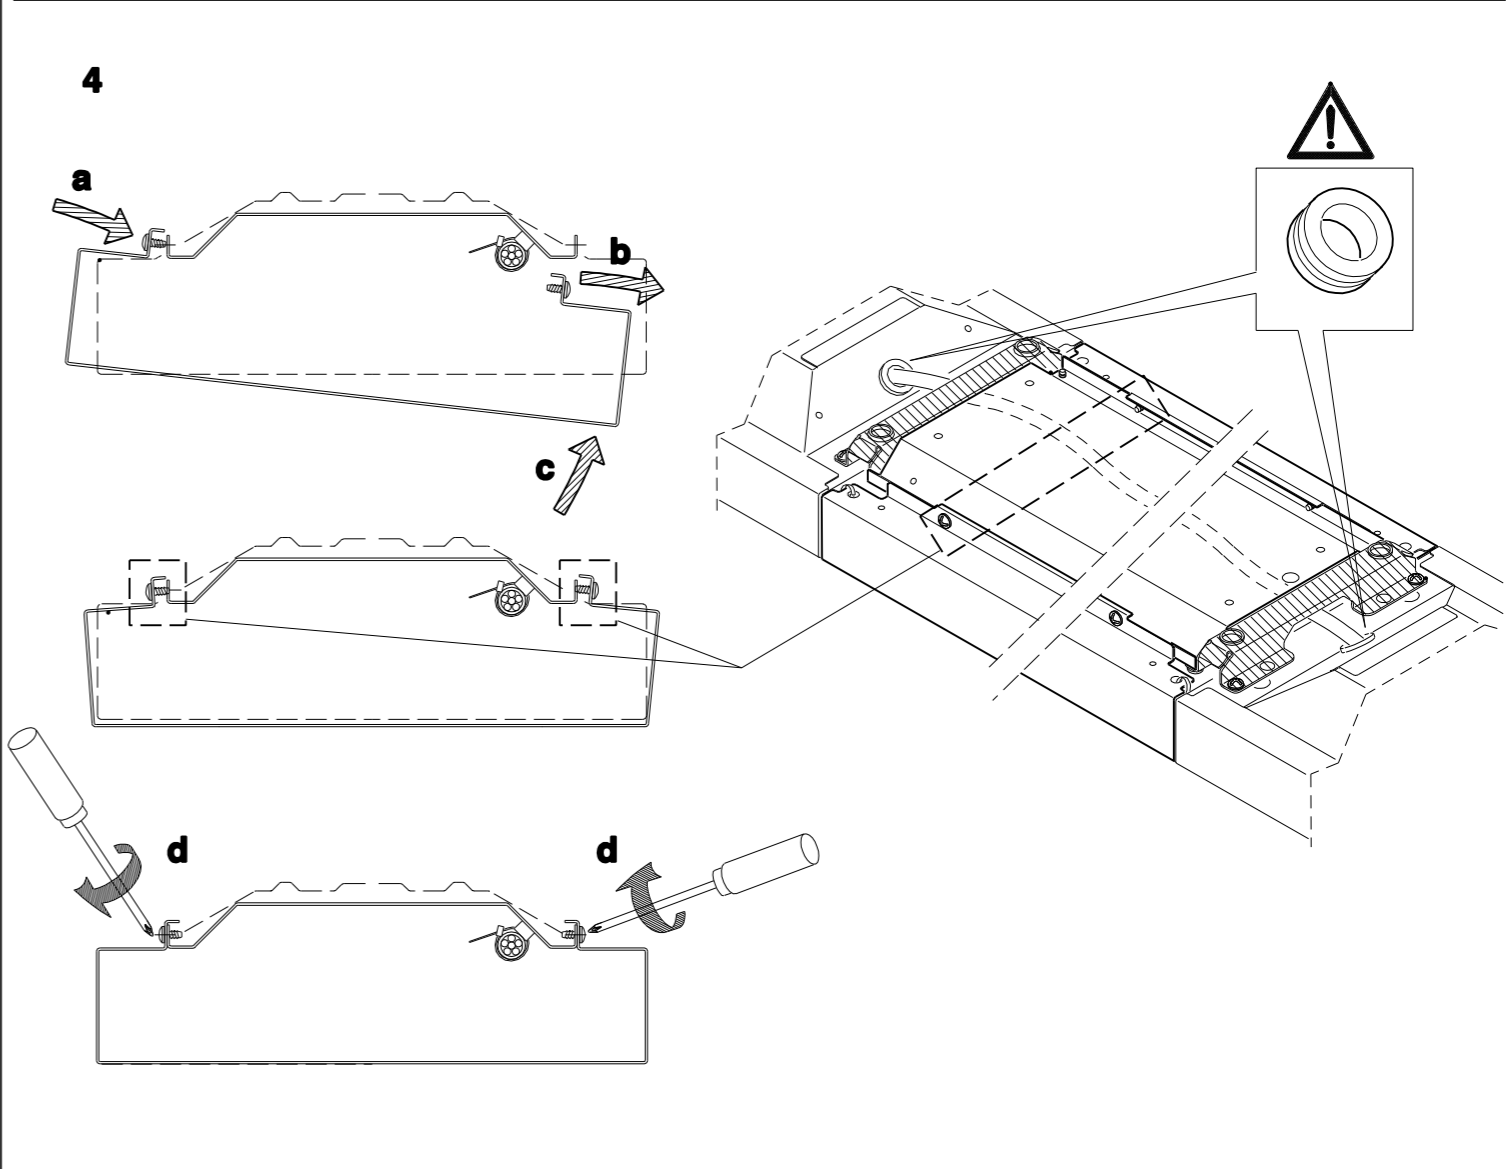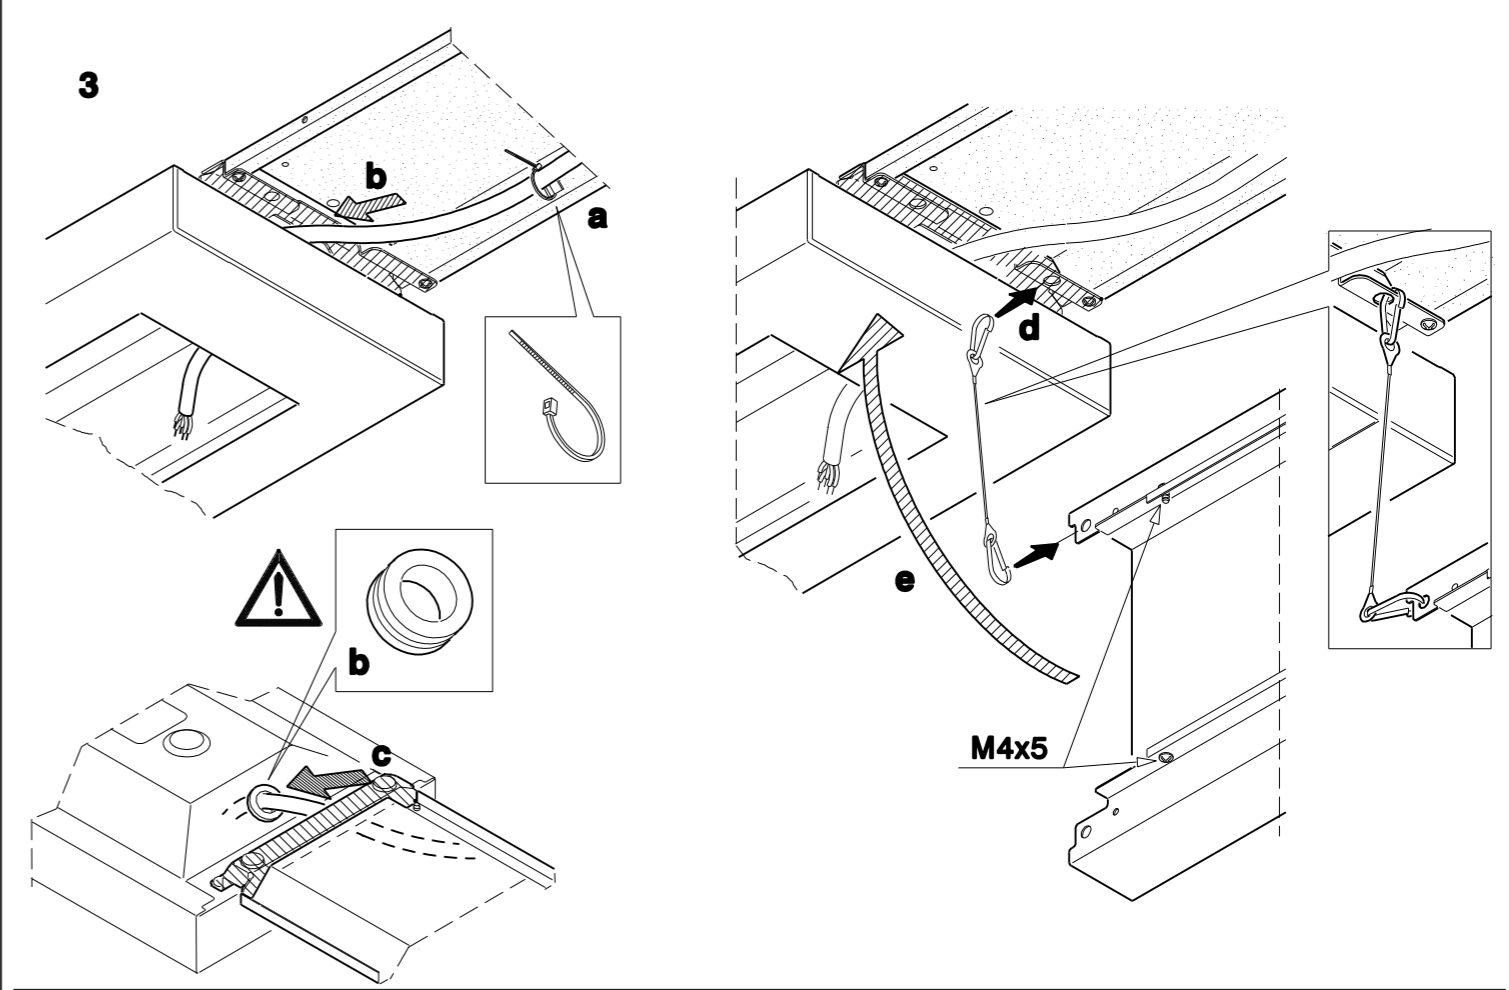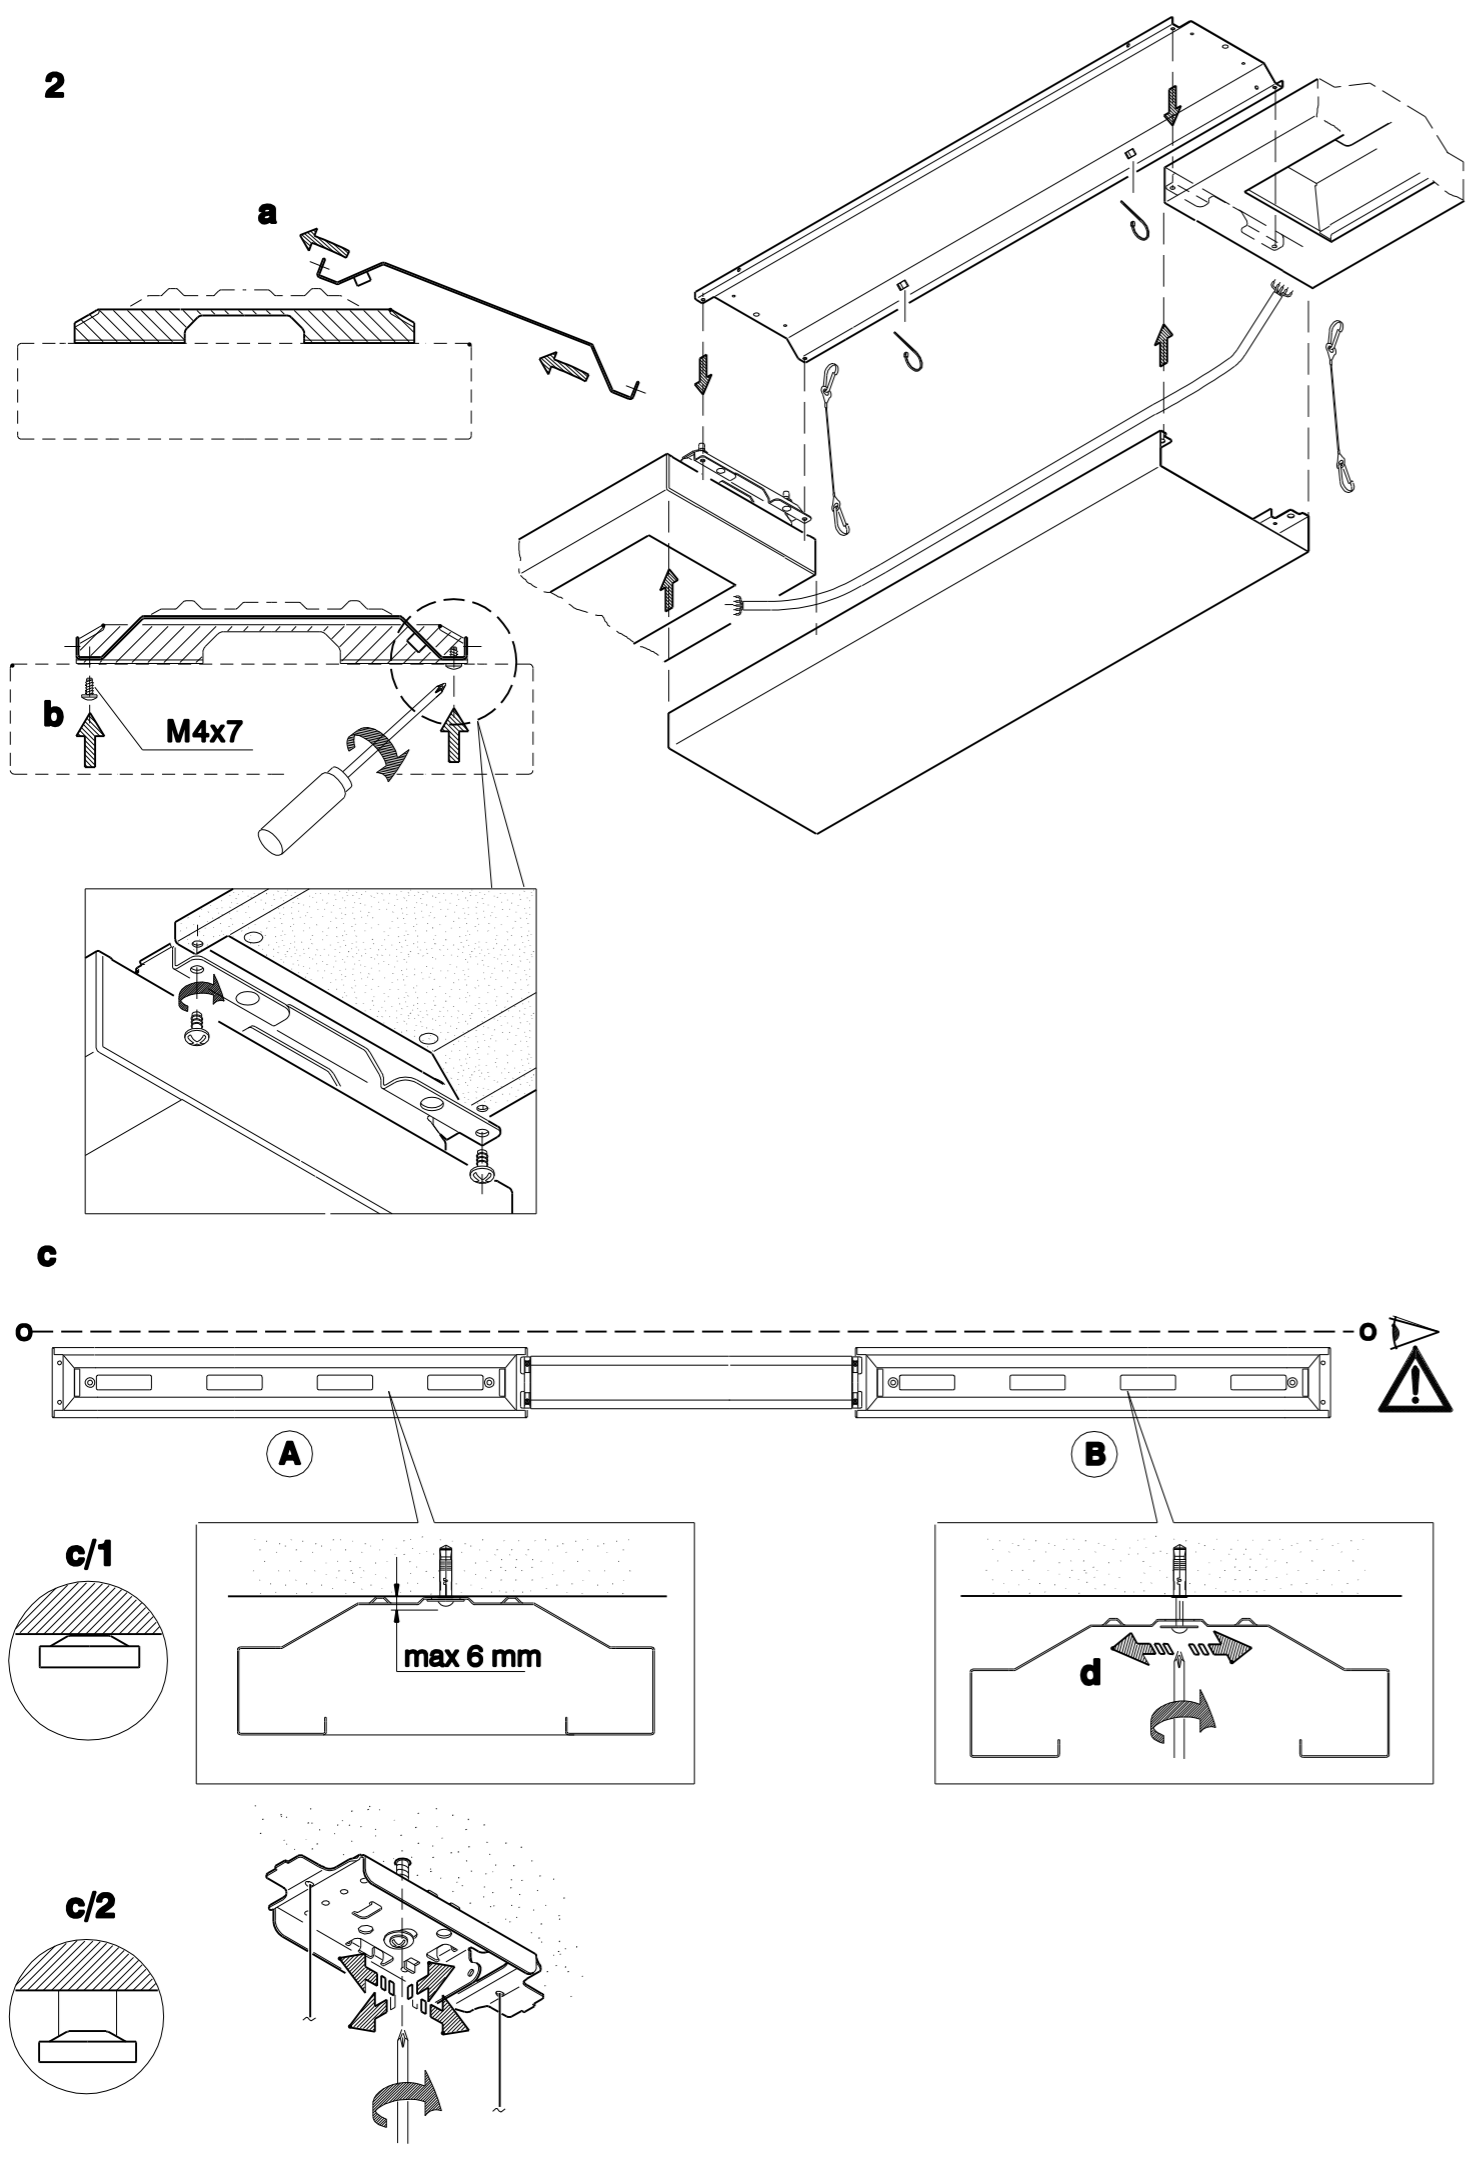

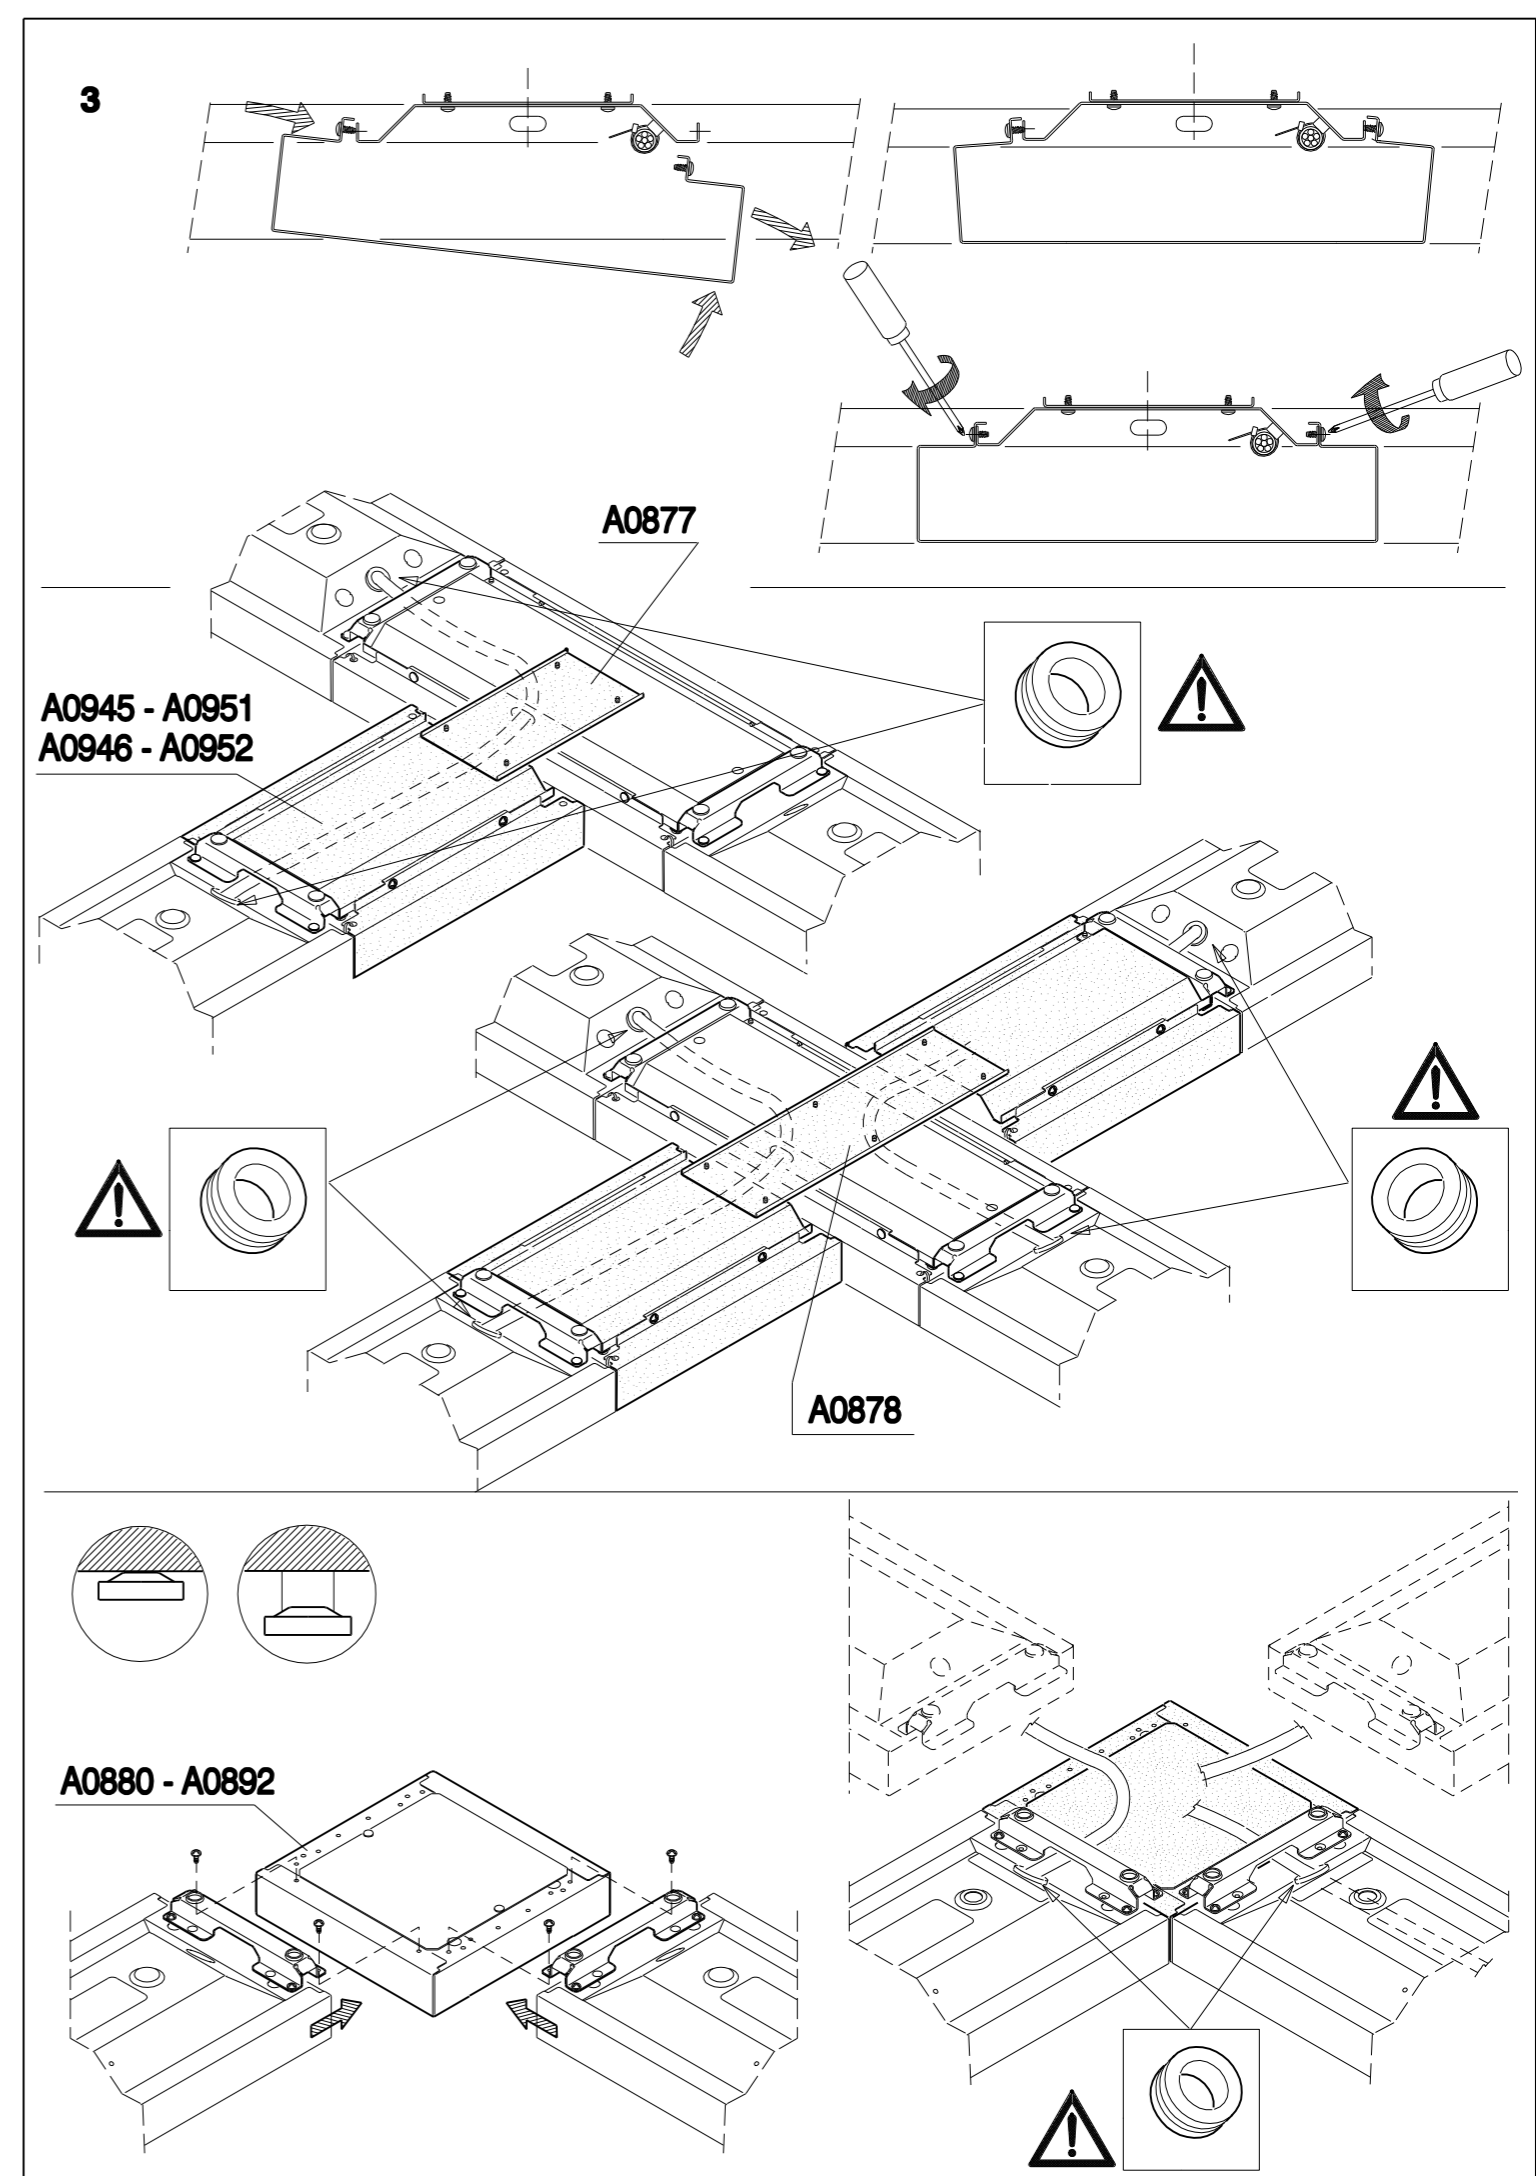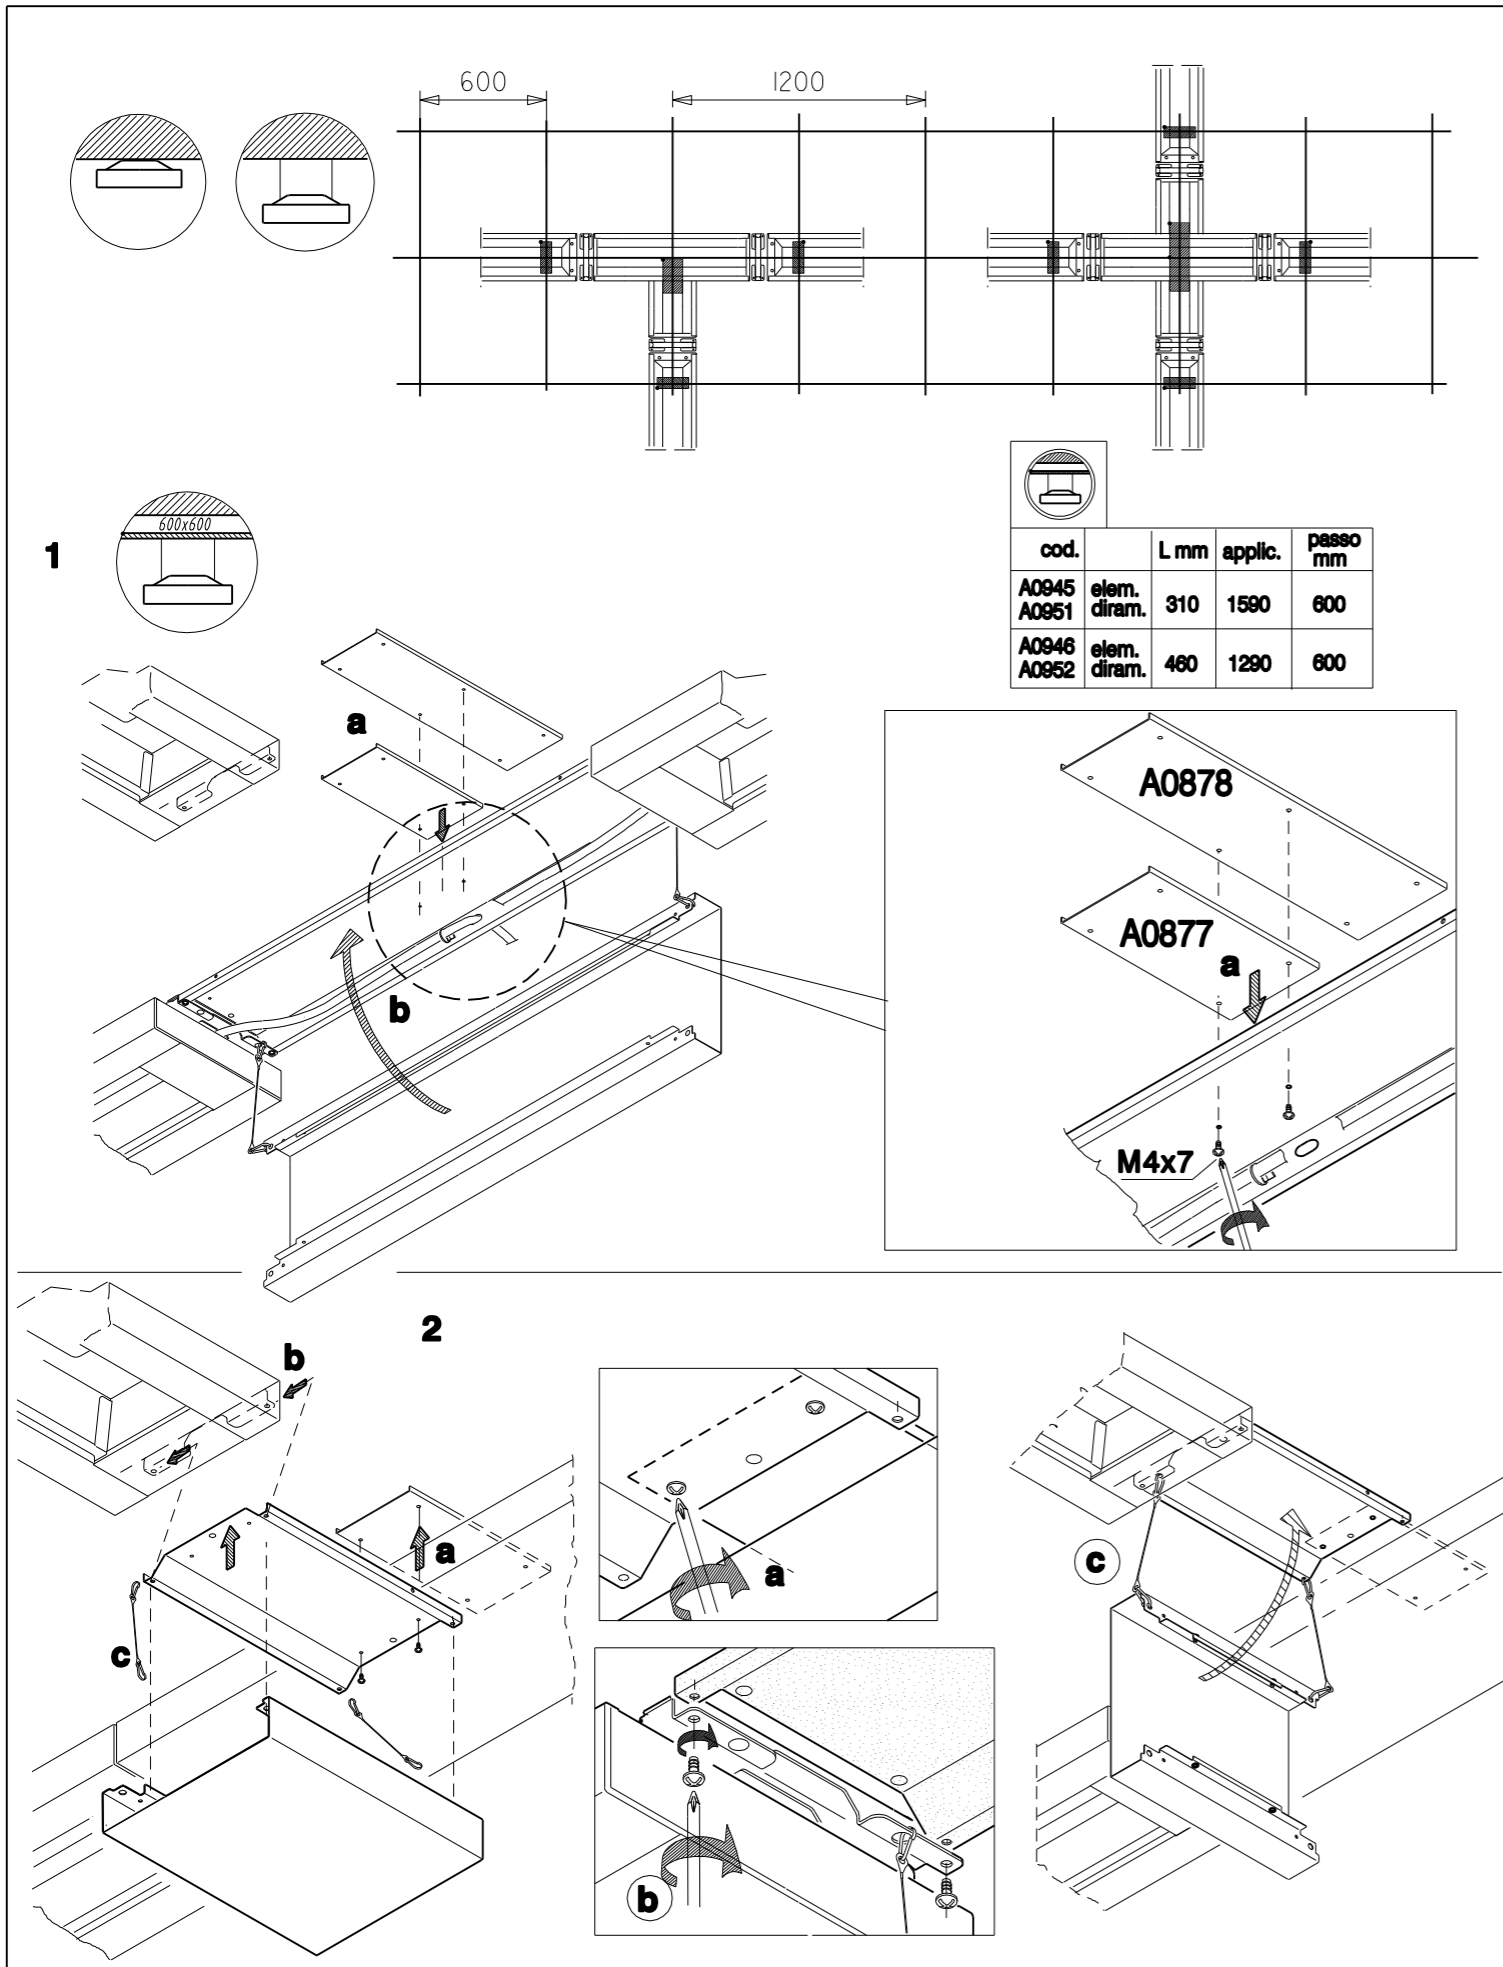


A0937 - A0938
A0941 - A0942

810 mm
1110 mm

H + 28 mm


H

1

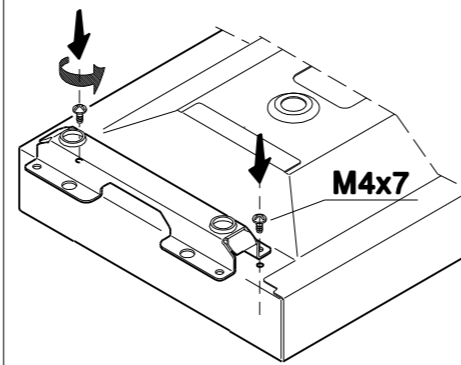


M4x7

2

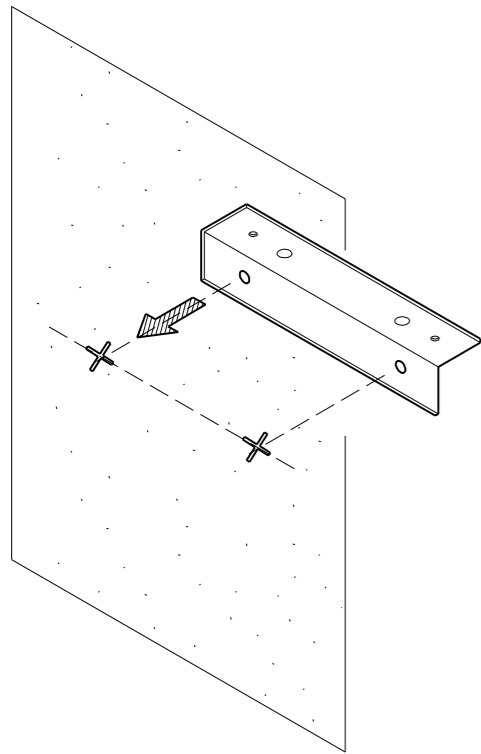


3

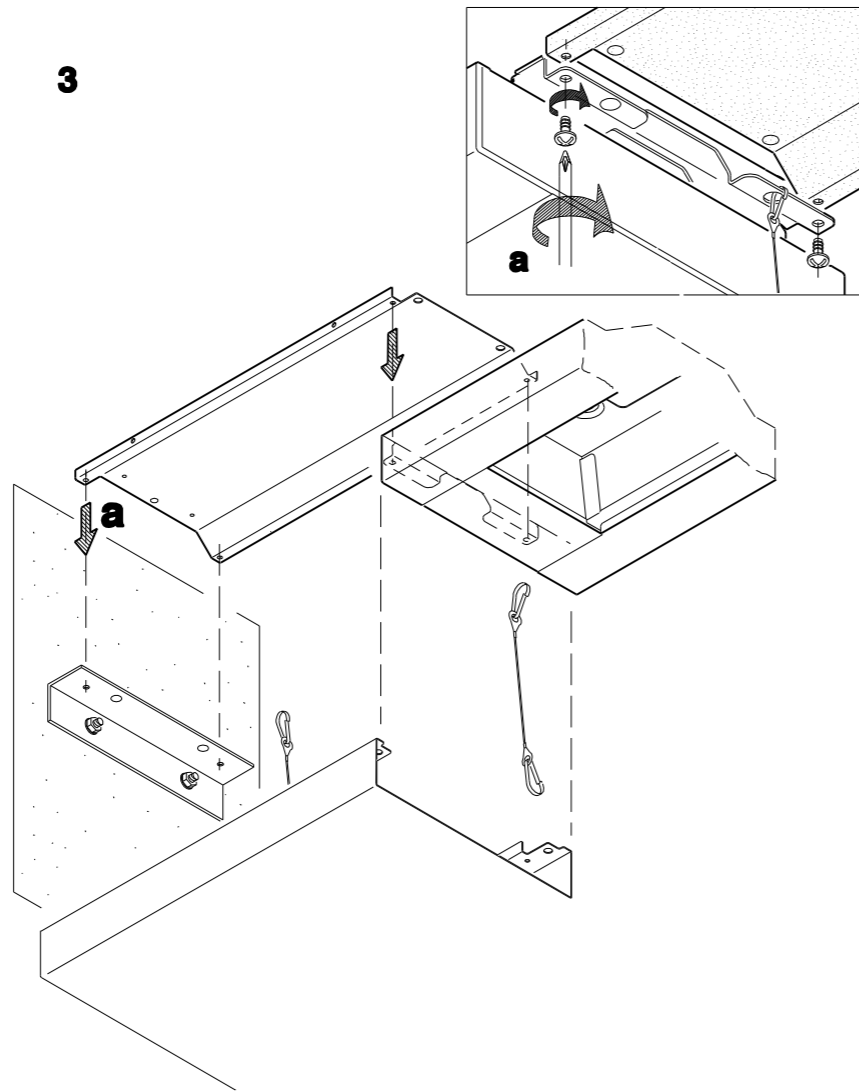


a

4

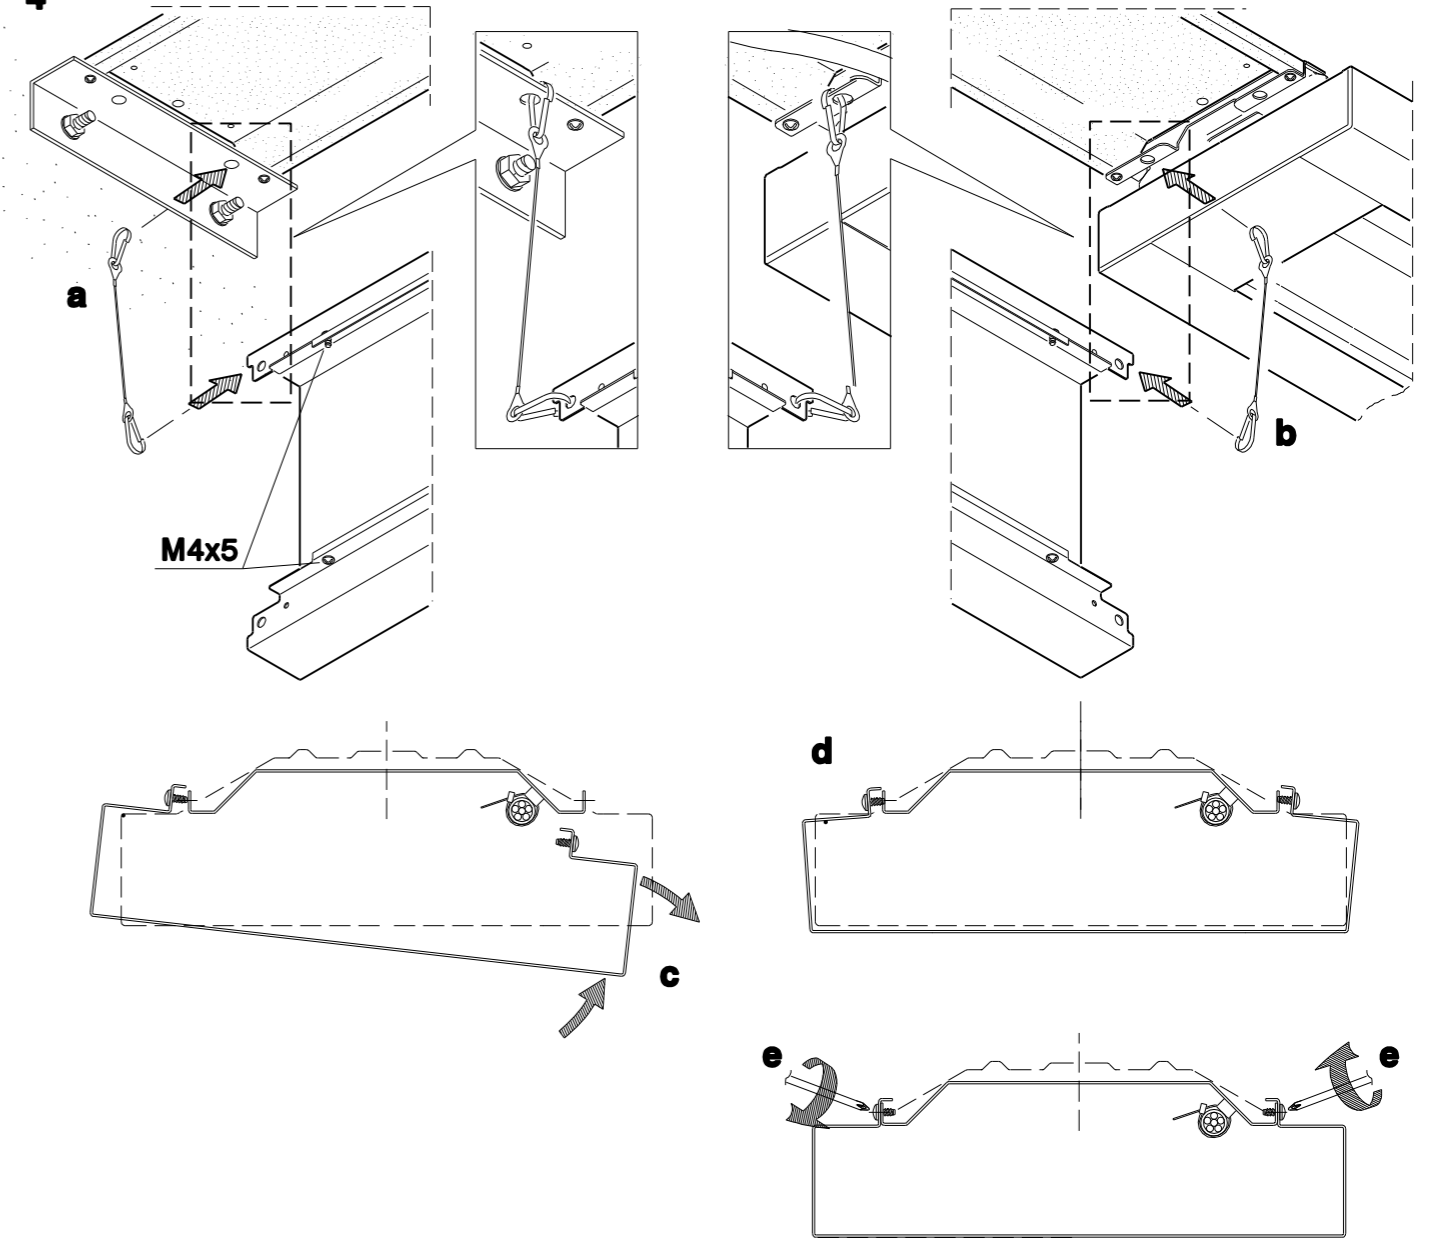

M4x5

A0957 - A0958

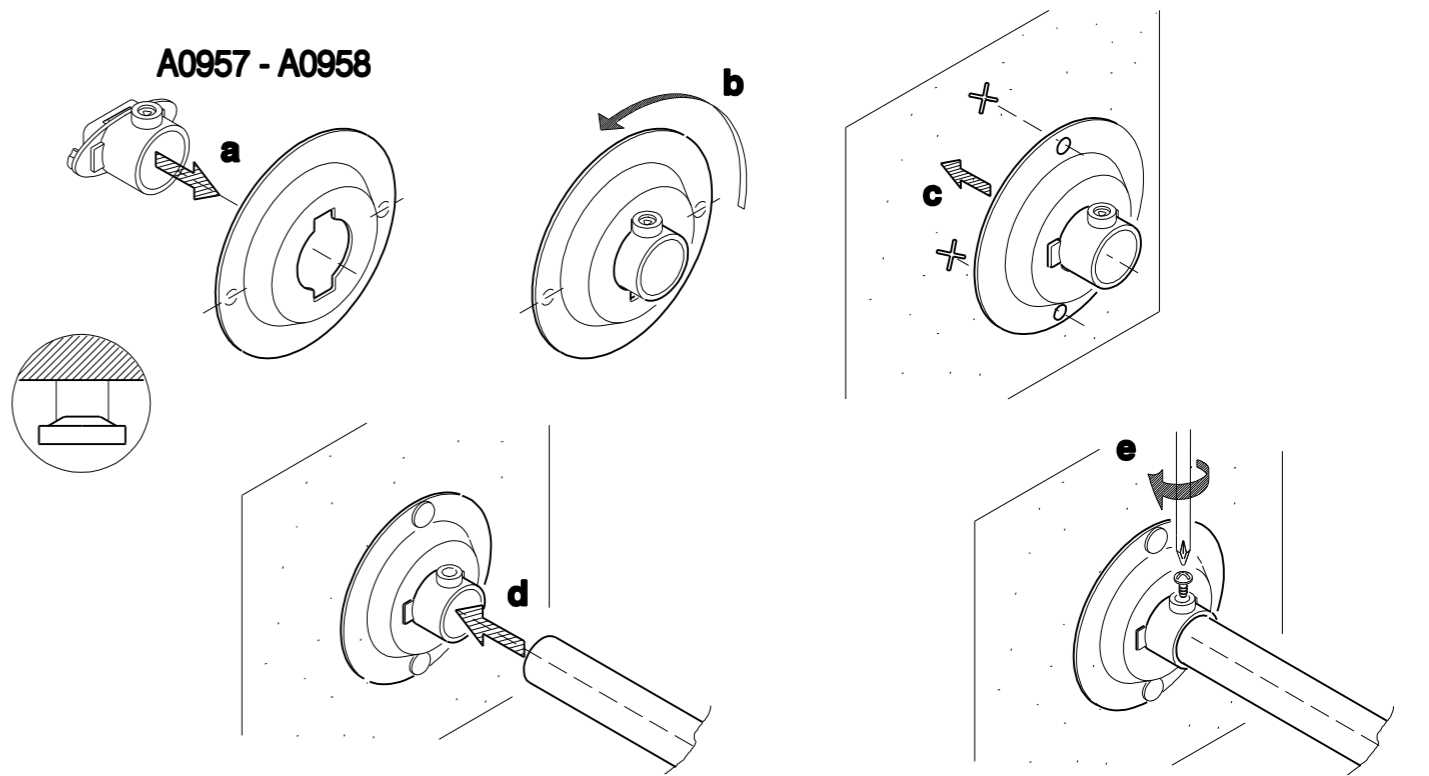

a

b

c

d

e